



Wiring SmartStat™ Wireless

Installer Notes:

- The Remote SmartStat™ Wireless is completely set up. When the system is installed it will be fully functional. After the components are installed per the installation manual, turn power back on to the furnace. Remember to set the time on the thermostat. Hit MENU and then DATE/TIME and follow the on screen instructions.
- The last step in the installation will be connecting the RedLINK internet interface to the Honeywell network. You will need the RedLINK MAC ID # (12 digits) and the MAC CRC # (four digits). These numbers are on the bottom of the RedLINK device. There is also a card in the RedLINK package which has these numbers. Keep a record of these numbers.
- Go to the website: <https://www.mytotalconnectcomfort.com/portal> and follow the instructions.

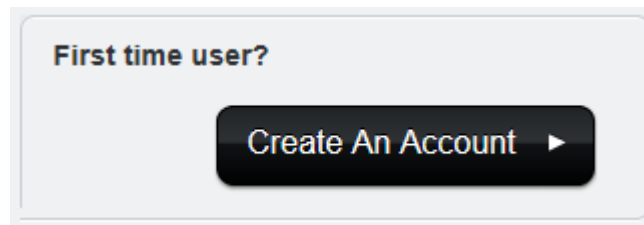

- You will receive a confirmation email with a link. Click that link, enter your password, and the screen will prompt you for the MAC ID # and CRC #.
- This is the point in time where you will decide who will “own” the account: the servicing company or the customer. This can be changed later. **IT IS IMPORTANT TO REMEMBER THIS INFORMATION!** Notice that the password characters are blanked out, so be sure to write the password down. Do a screen copy or snip before you press SUBMIT.

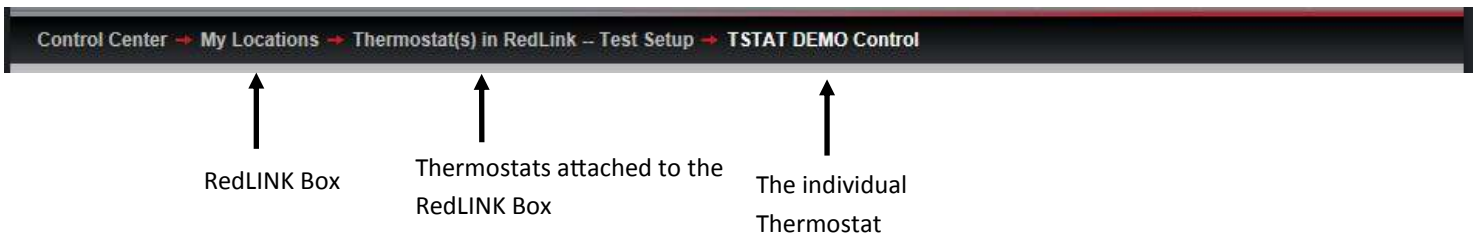

Waste Oil Heating Equipment
Parts, Sales, and Service
1-800-347-9575
www.nueraheat.com

p/n 98120067